FLUID SELECTION

Customer: Contact: Telephone: Fax: Job:

GIVEN DATA

Construction

Item: Coils Per Bank: Allow Opp. End: Tube OD (IN): Coil Duty: Fins Per Inch: Rows: Fin Surface: Fin Height (IN): Finned Length (IN): Tubing Mat. (IN) Fin Mat. (IN) Conn Qty/Size (IN): Circuiting: 4.23.21.999

HWCM4

Optimize

Optimize ABC

0.020 Copper

1 / Optimize Optimize

0.0075 Aluminum

Heat-Return Bend

1

No

5/8

2

39.00

37.50

Date: 4/1/2004 From: Company: Return Tel: Return Fax:

Air Side

10,500.00
0.00
0.00
70.00
0.00
0.00
Water
180.00
160.00
0.00
20.00
No

OUTPUT DA	ТΑ	Specified Coil
Model Number:		5MS1302B
Air Velocity:	(SFPM)	1,033.85
Total Capacity:	(MBH)	831.87
Sens. Capacity:	(MBH)	N/A
Lvg. Air DB:	(°F)	73.05
Lvg. Air WB:	(°F)	N/A
Standard APD	(IN WG)	0.75
Lvg. Fluid:	(°F)	159.13
Fluid Flow:	(GPM)	81.57
Fluid PD:	(FT H20)	2.37
Fluid Vel.:	(FPS)	3.41
Conn Size:	(IN)	2.50
Weight (Dry):	(LB)	106
Weight (w/Fluid):	(LB)	139
Notes:		Α

Notes:

A) ARI Certified And Rated In Accordance With ARI 410.

CERTIFIED DRAWING

Customer: Contact: Telephone: Fax:


Job:

Date: 4/1/2004 From: Company: Return Tel: Return Fax:

ITEM	QTY	TYPE	FPI	ROWS	FIN	FH (IN)	FL (IN)	HAND
HWCM4	1	5MS	13	02	В	39.00	37.50	Left

MATER	IALS OF CONSTRUCTION	OPTIONS							
Fins	.0075 Aluminum	Casing Type	Flanged		Label Kit	No			
Tubes	.020 Copper	Vent/Drain	.50 FPT on End Cap		Phenolic Coating	No			
Casing	Galvanized Steel				Mounting Holes	No			
Connection	2.500 MPT Carbon Steel				Turbospirals	No			



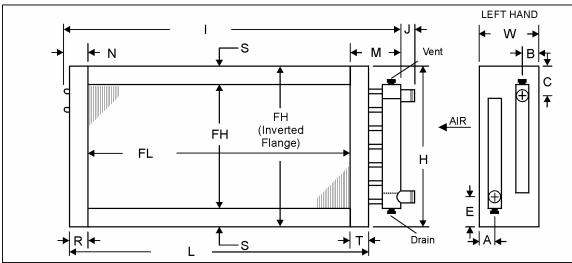

DIMENSIONAL DATA (IN)																
CONNECTION											F		s	ſ		
SIZE	Α	В	С	D	Е	F	н	I	J	L	М	Ν	R	S	Т	w
2.50	2.25	2.25	3.75	N/A	2.75	N/A	42.00	44.75	6.00	40.50	5.25	2.00	1.50	1.50	1.50	7.50
Notes:																

......

- 1. All dimensions are in inches.
- Phenolic coated coils require a longer lead-time since they must be re-tested after coating.
 .375 inch mounting holes will be provided on 6 inch centers from
- 3. .375 inch mounting holes will be provided on 6 inch centers from the centerline of the fin height and finned length. Not available when S < 0.75 inches.
- The supply line should be connected to the lower connection on the leaving air side for counterflow operation.
- 5. Coils will vent and drain through factory-installed vent and drain fittings when mounted level for horizontal flow.

<u>GENERAL NOTES</u> 6. Connection location other than standard could affect vent and drain locations. Consult factory.