

## **IMPORTANT**

Remove jumper between terminal I & C before connecting interlocks. Wire in accordance with local & Canadian Electrical codes. Read instructions carefully before wiring and operating.

Frame shown in heavy line represents Thermolec Electric Coil. All wiring outside this frame are "typical external wiring by others".

## **LEGEND**

Automatic Reset Cut Out C1,C2 Operating Contactors СМ Back-up Contactor to Manual DISC

Disconnect Switch D46 Electronic Step Controller

Fuse

М Manual Reset Cut Out

OL Overload Relay

Pressure Différential Switch PDS PES Pressure Electric Switch

PL Pilot Light R Relay

SSR

Solid State Relay Control Circuit Transformer

TH Thermostat THR Thermal Relay DT **Duct Thermostat** RT Room Thermostat

TITLE/TITRE



LTEE LTD

DRAWING NO. 3B34-7M2U-5200-0000 DATE PER